


2005-2011 Toyota Tacoma Front Bumper

Installation of Hammerhead bumper

1. Mount Hammerhead frame mounts (orange arrow) to OEM frame using OEM hardware.

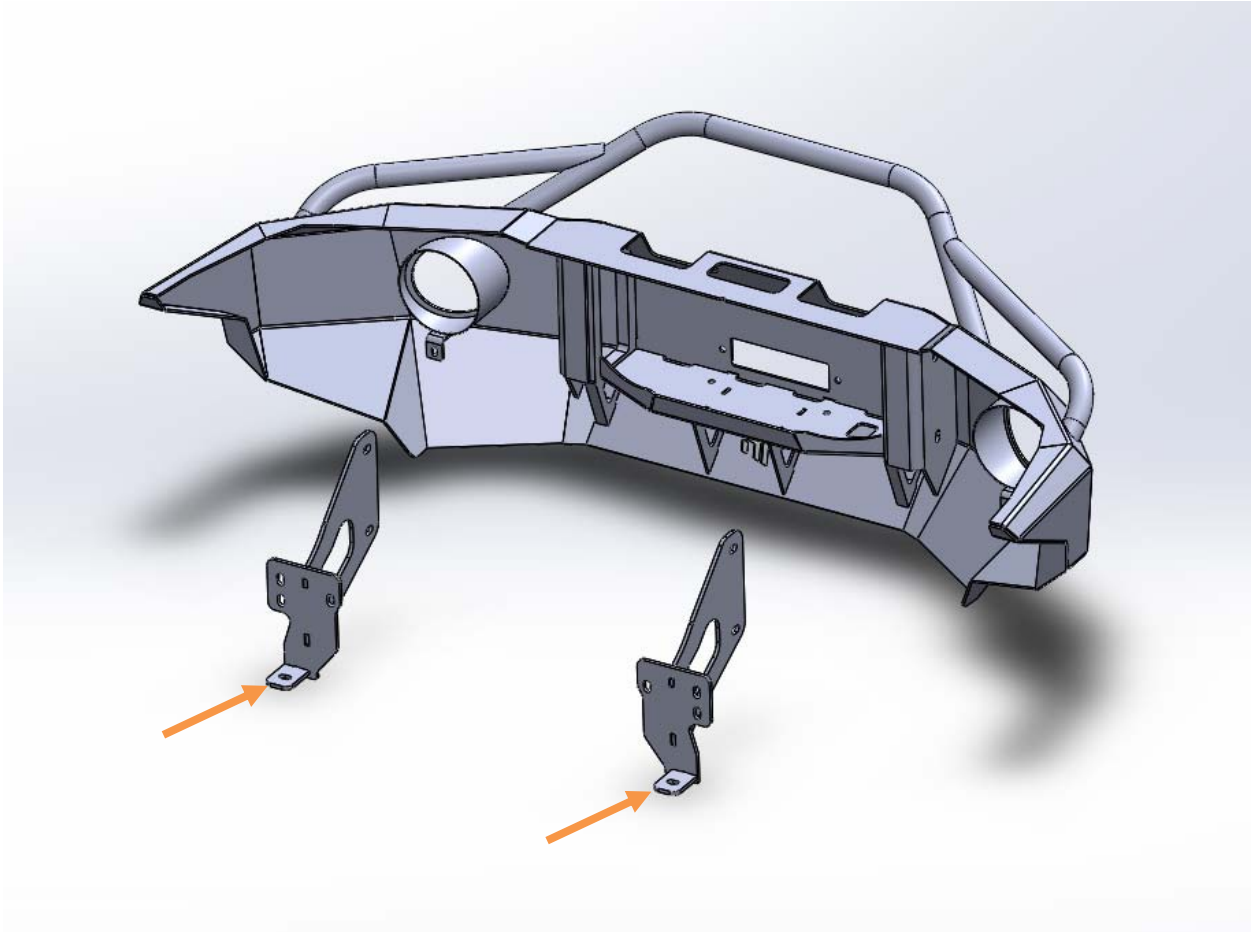

2. In this step you will use four $\frac{1}{2}$ "-13 X2" bolts, eight $\frac{1}{2}$ " flat washers, four lock washers, and four $\frac{1}{2}$ "-13 nuts from hardware kit #1.
Attach Hammerhead bumper to Hammerhead frame mounts using hardware. Align and tighten bumper using a $\frac{3}{4}$ " wrench and socket.