

## POLARIS 2015-20 RZR XP 4 1000 Lower Door Panels

Thank you for choosing Rough Country for all your vehicle needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components.

Periodically check all hardware for tightness.

### KIT CONTENTS:

- Front Dr Side Door x1
- Front Pass Side Door x1
- Rear Dr Side Door x1
- Rear Pass Side Door x1
- Rubber Edge Trim x1
- Pass Side Top Mounting Door x1
- Dr Side Top Mounting Door x1

### TOOLS NEEDED:

- T25 Torx Bit
- 4mm Allen Wrench

### HARDWARE INCLUDED:

- 6MMx20MM Bolts x6
- 6MMx15MM Bolts x12
- 6MMx18 Flat Washers x12
- 6MMx12 Flat Washers x6
- 6MM Lock Washer x18
- 6MM Clip Nut x14
- 304 SUS Clip 32MM x6
- Spacer Nut x2
- Allen Wrench S=4 x1





### Torque Specs:

Size	Grade 5	Grade 8	Size	Class 8.8	Class 10.9
5/16"	15 ft/lbs	20ft/lbs	6MM	5ft/lbs	9ft/lbs
3/8"	30 ft/lbs	35ft/lbs	8MM	18ft/lbs	23ft/lbs
7/16"	45 ft/lbs	60ft/lbs	10MM	32ft/lbs	45ft/lbs
1/2"	65 ft/lbs	90ft/lbs	12MM	55ft/lbs	75ft/lbs
9/16"	95 ft/lbs	130ft/lbs	14MM	85ft/lbs	120ft/lbs
5/8"	135ft/lbs	175ft/lbs	16MM	130ft/lbs	165ft/lbs
3/4"	185ft/lbs	280ft/lbs	18MM	170ft/lbs	240ft/lbs





## FRONT INSTALLATION INSTRUCTONS



1. Remove front outer door cover bolts using a T25 Torx bit and remove cover. **See Photo 1 and Photo 2.**

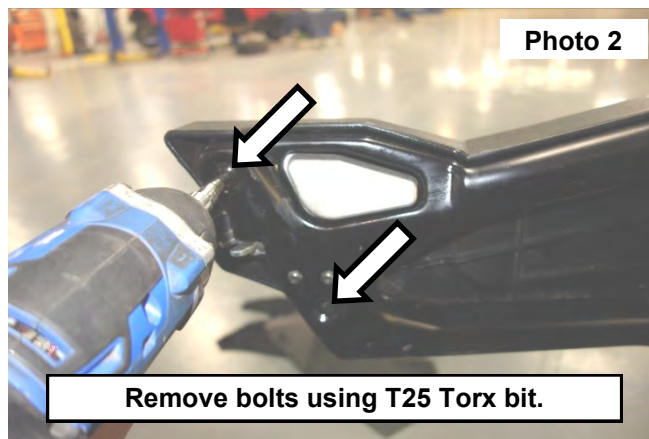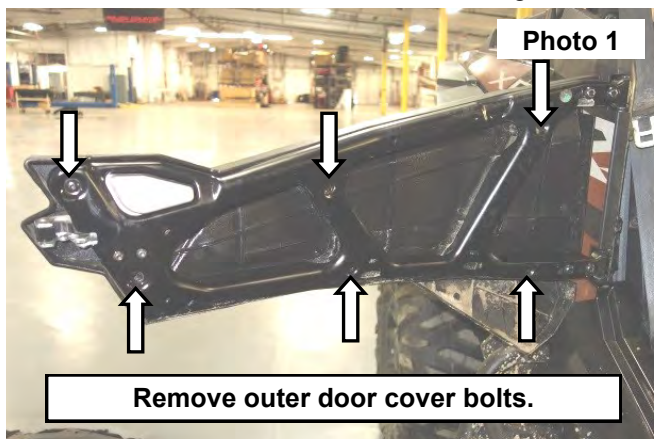

2. If equipped with factory lower panels, remove the bolts holding the lower panel. **See Photo 3.**
3. Install the supplied 6mm clip nuts . **See Photo 4**

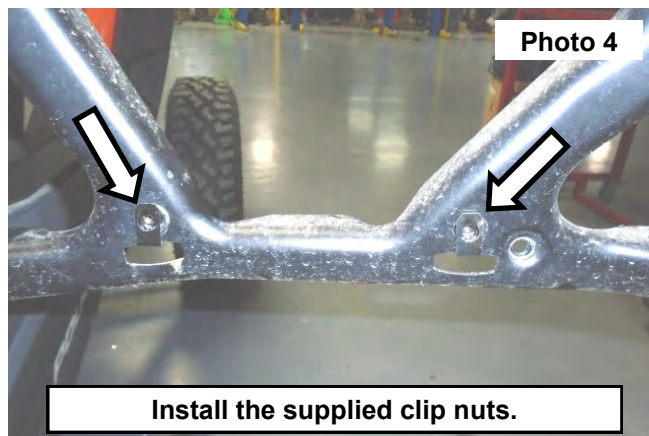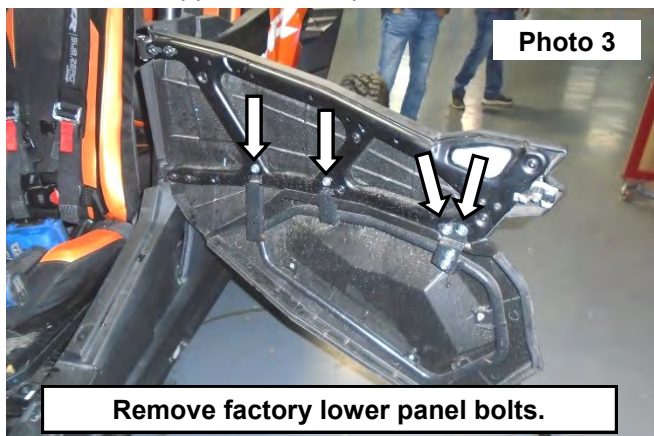

4. Install the RC lower panel to the clip nuts with the supplied 6mm x 15mm bolts and 6mm x 18 flat washers and lock washers using a 4mm Allen wrench. **See Photo 5.**
5. Install the spacer nut on the end of the door and secure the lower panel to the spacer nut with the supplied 6mm x 15mm bolts and washers using a 4mm Allen wrench. **See Photo 6.**

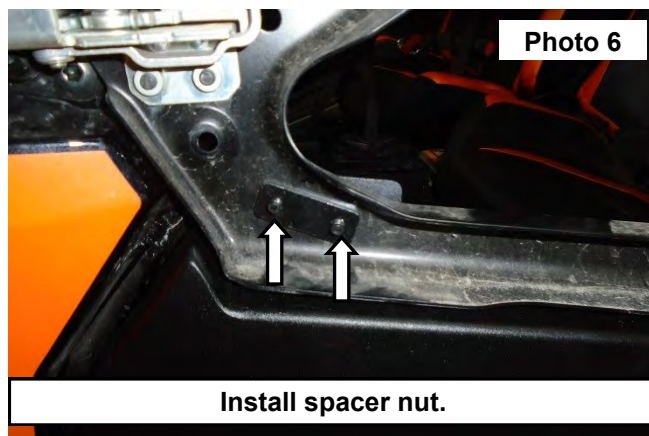
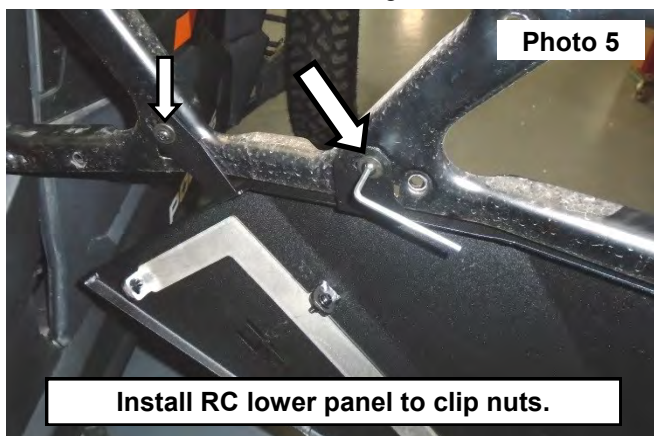


6. Reinstall the outer door cover.





## REAR INSTALLATION INSTRUCTIONS



1. Remove rear outer door cover bolts using a T25 Torx bit and remove cover. **See Photo 1 and Photo 2.**

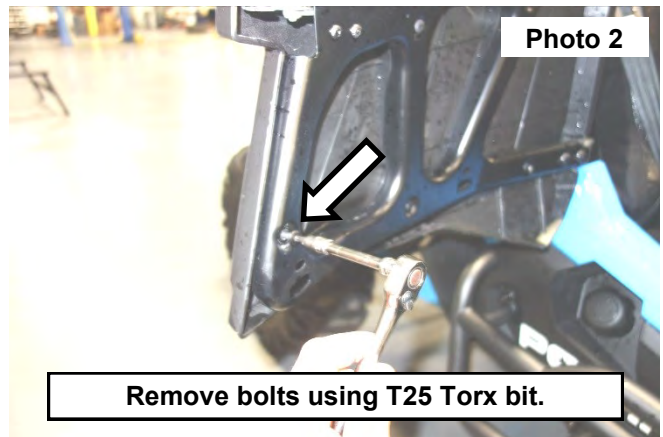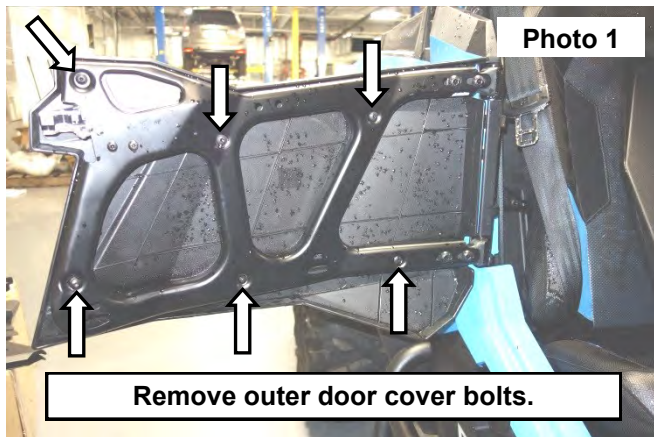

2. Install the nut clips in the two holes at the bottom of the door. **See Photo 3 and Photo 4.**

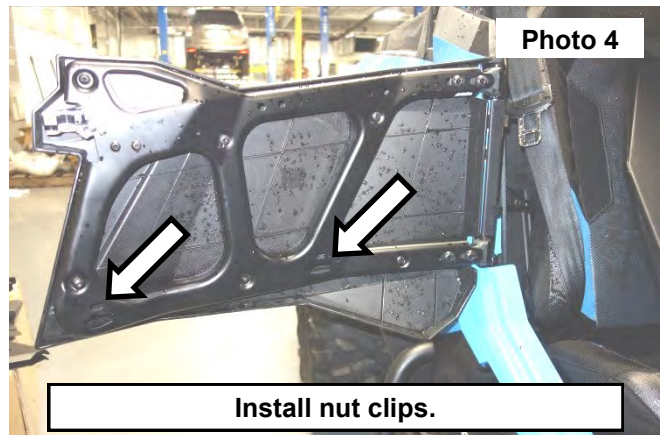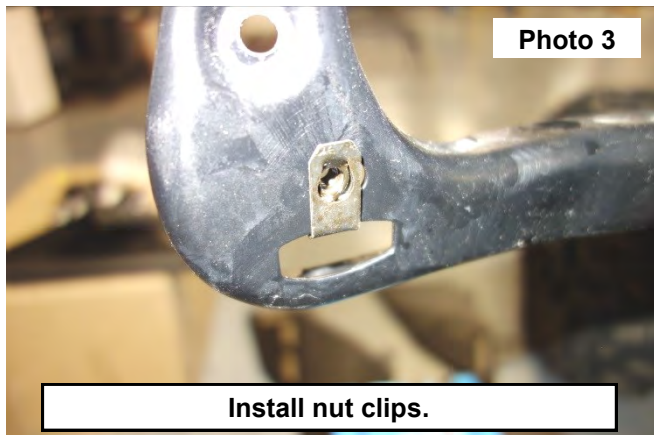

3. Install the door using the supplied 6mm x 15mm bolts and 6mm x 18 flat washers and lock washer using a 4mm Allen wrench. **See Photo 5 and Photo 6.**

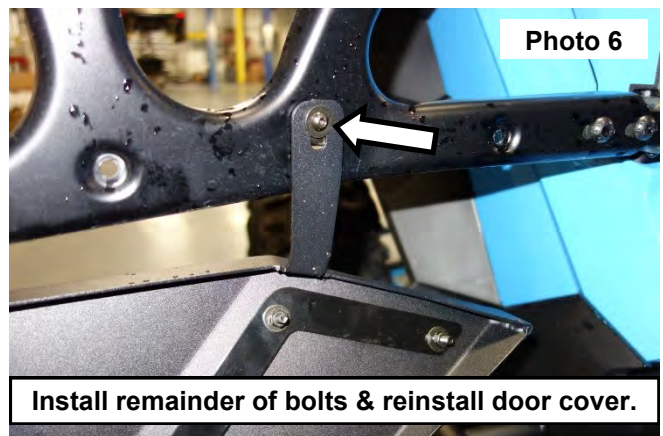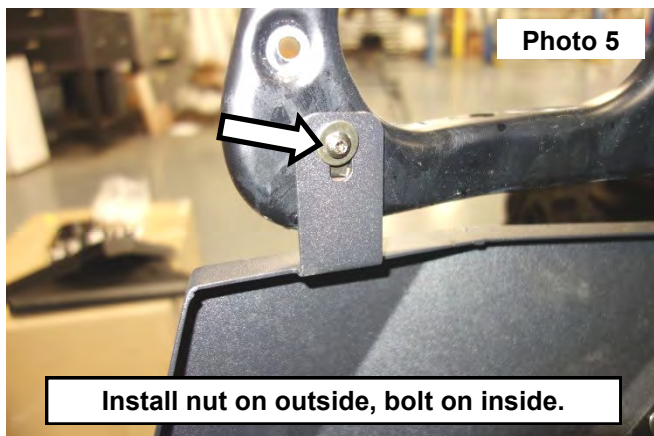


4. Reinstall the outer door cover.

5. Remove the side cover panel behind the rear doors using a T40 Torx bit. See Photo 7 and Photo 8.



6. Install the supplied 6mm clip nuts to the RC side cover panel and install the RC panel using the supplied rubber clamps and 6mm x 20mm bolts and 6mm x 12 flat washers and lock washers. See Photo 9 and Photo 10.

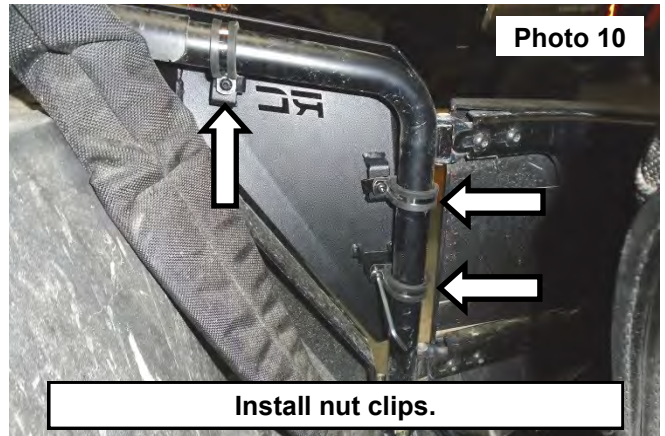

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

